

Memory Craft 100E Version 1.12 Installation Instructions

This update is only for Memory Craft 100E owners.

Use a USB flash drive for the update. Before saving the update data onto the USB flash drive, formatting of the USB flash drive is recommended. (Before formatting, carry out a data back-up.) Please refer to "how to format a USB flash drive".

Update Method

1. Download the file from the website and save it on your PC.
2. Open the unpacked file and click "Update_MC100Ev112.zip".
Please refer to "how to unpack a zip file".
3. Double click on "SystemUpdateVer1.12 for MC100E_EN/DU/FR/GE/SP.pdf".
4. Follow the instructions and carry out the update.

Finish